

H 80 / H 100 / HG 100 / HGH 100

Varianto








Montageanleitung / Notice de montage / Assembly instruction



Flex-Well Vertriebs GmbH & Co.KG

Industriestr. 80

32120 Hiddenhausen

         info@flex-well.de

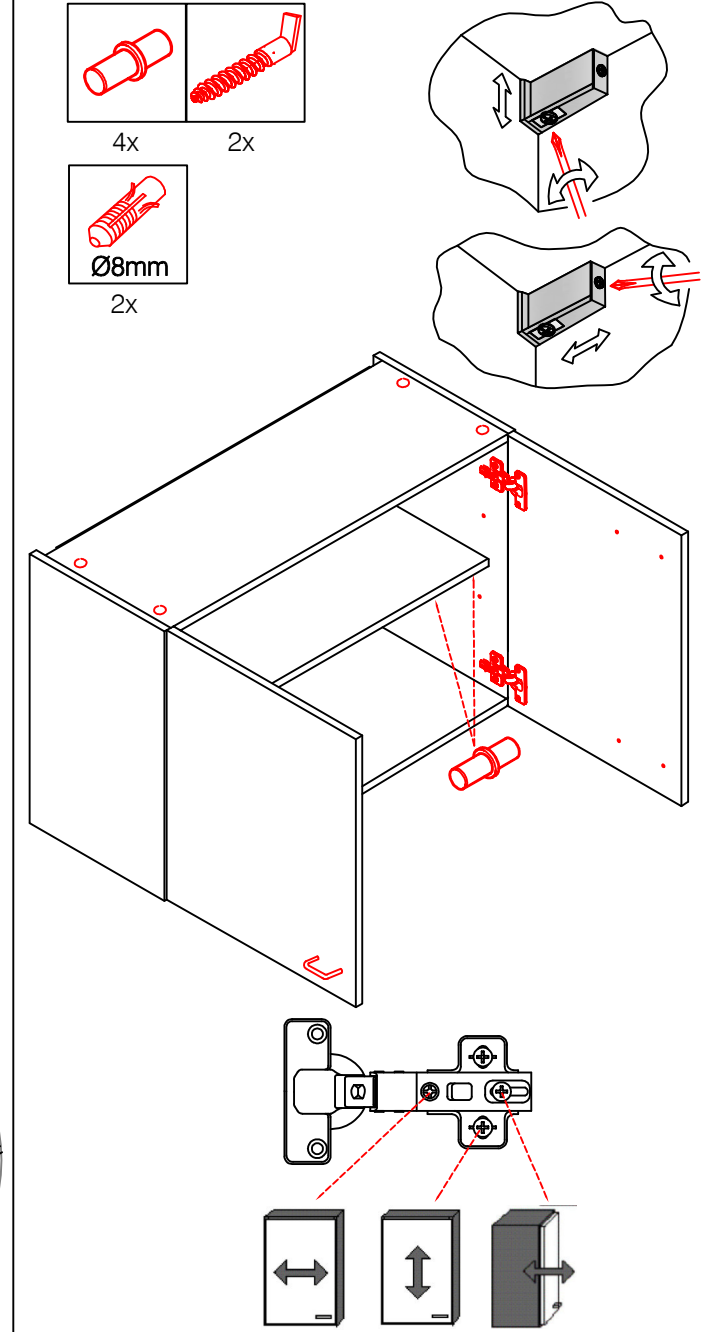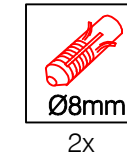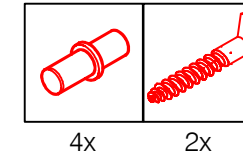
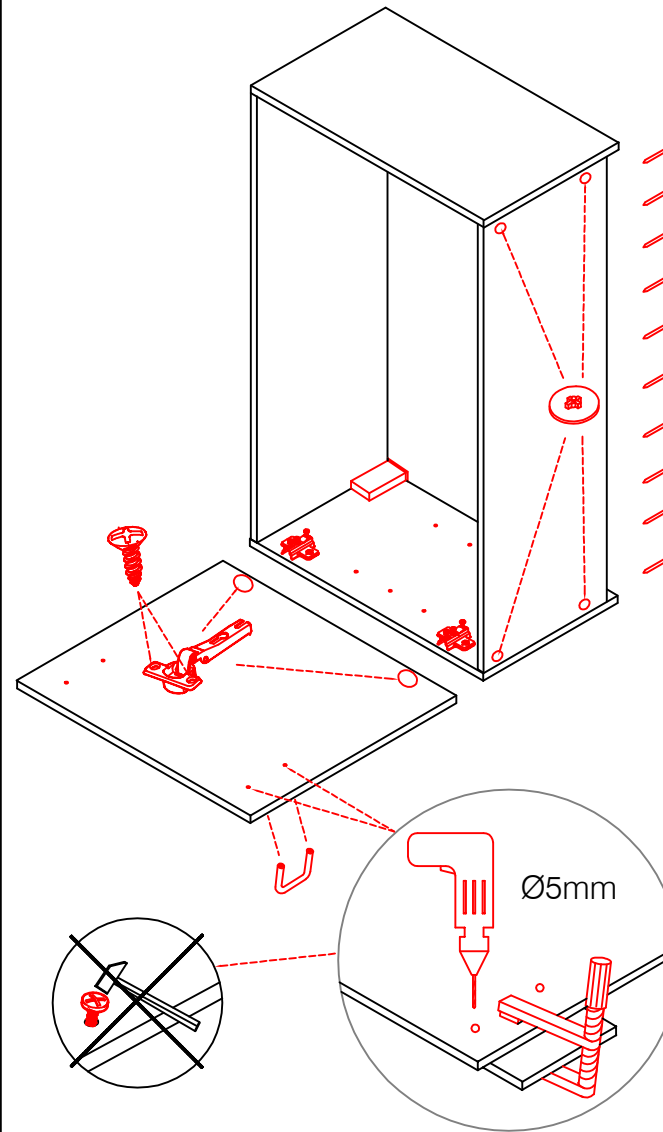
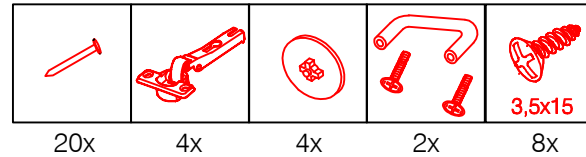
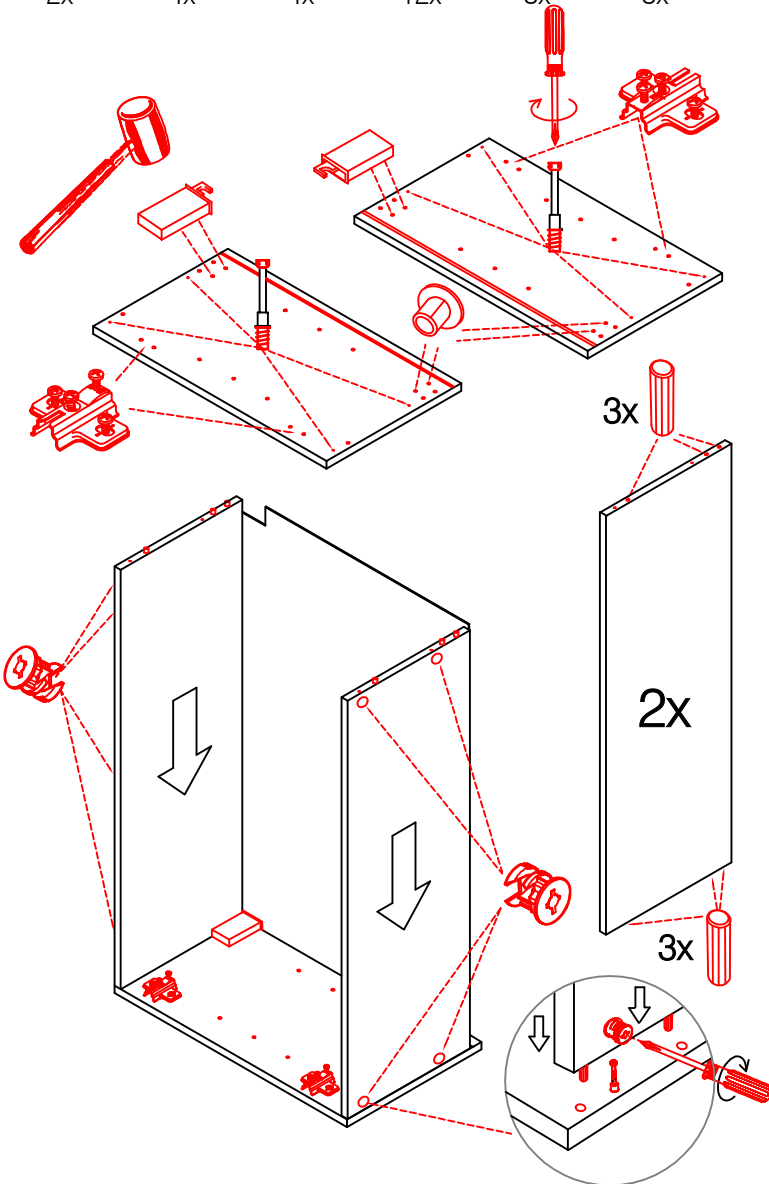
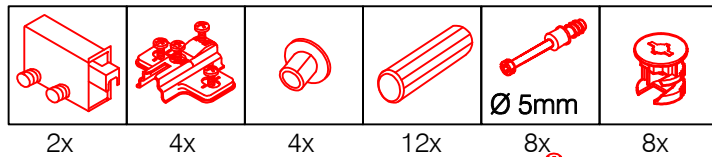


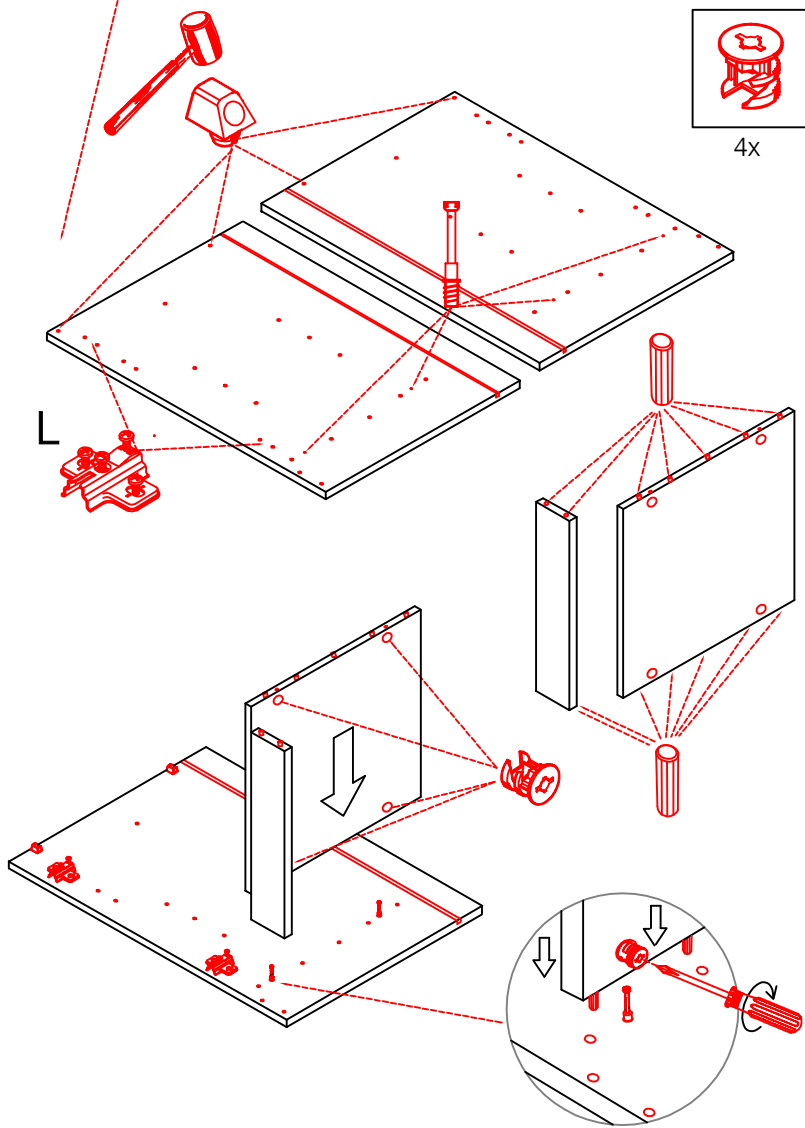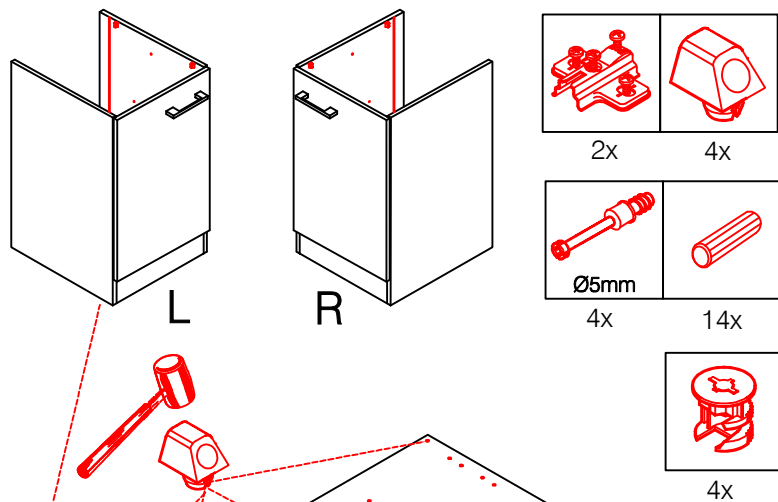

SPU 50 Varianto Blocktype

Montageanleitung / Notice de montage / Assembly instruction

   
 
 
Flex-Well Vertriebs
GmbH & Co. KG
Industriestr. 80
32120 Hiddenhausen
info@flex-well.de

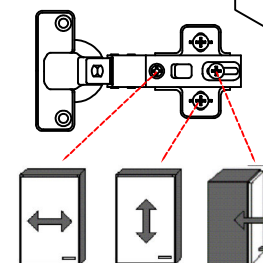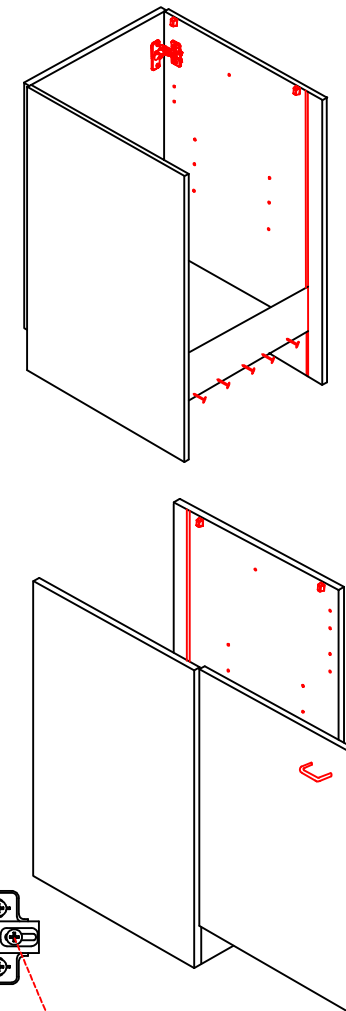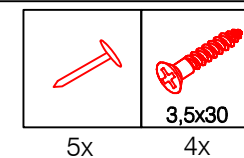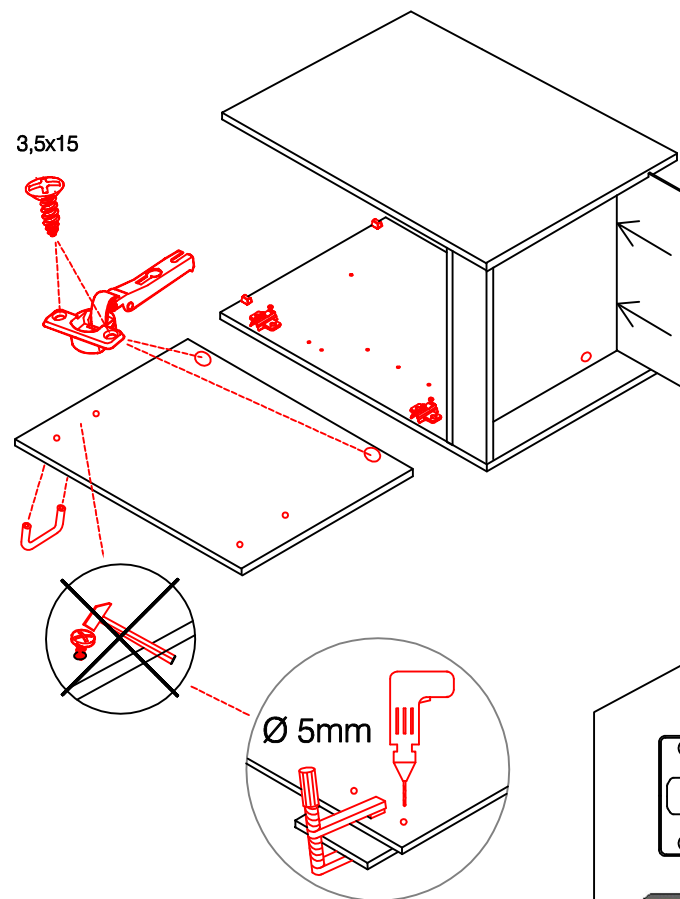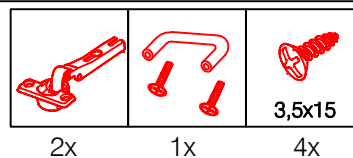

USSA 50 B Varianto

Montageanleitung / Notice de montage / Assembly instruction

   Flex-Well Vertriebs GmbH & Co. KG
Industriestr. 80
32120 Hiddenhausen
info@flex-well.de

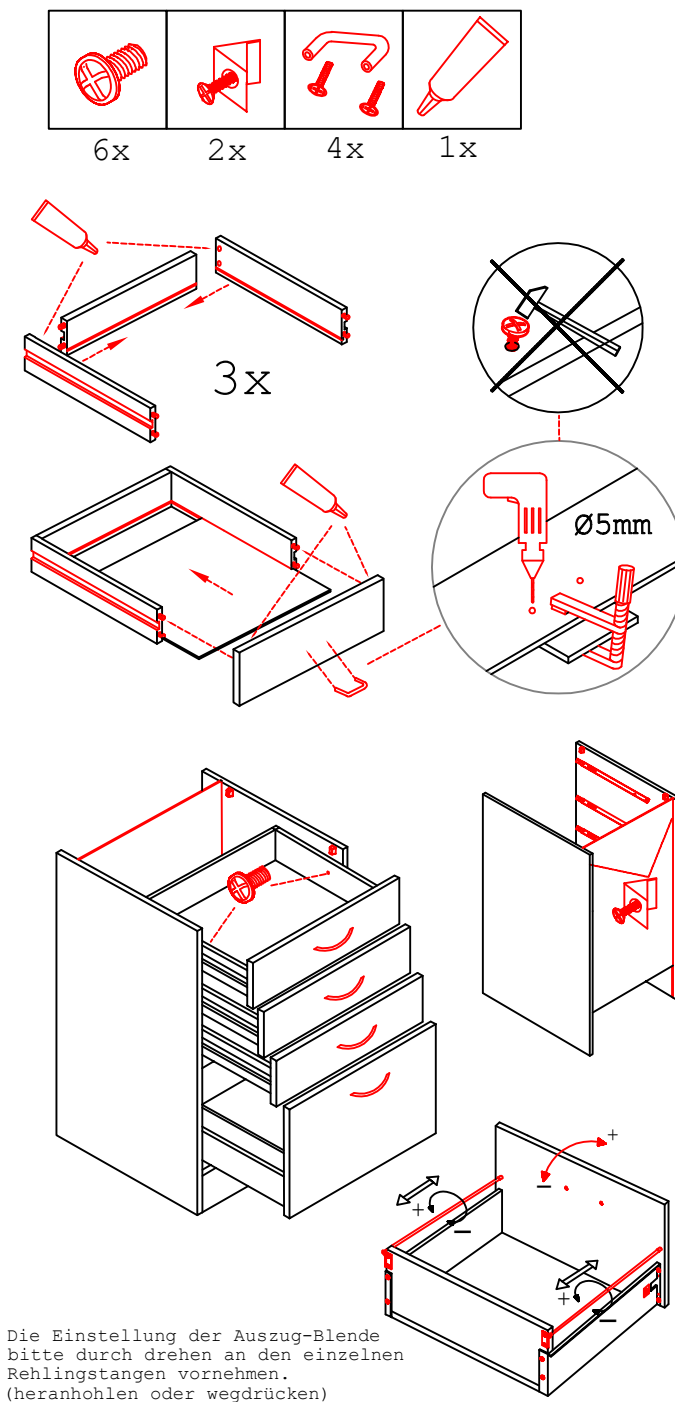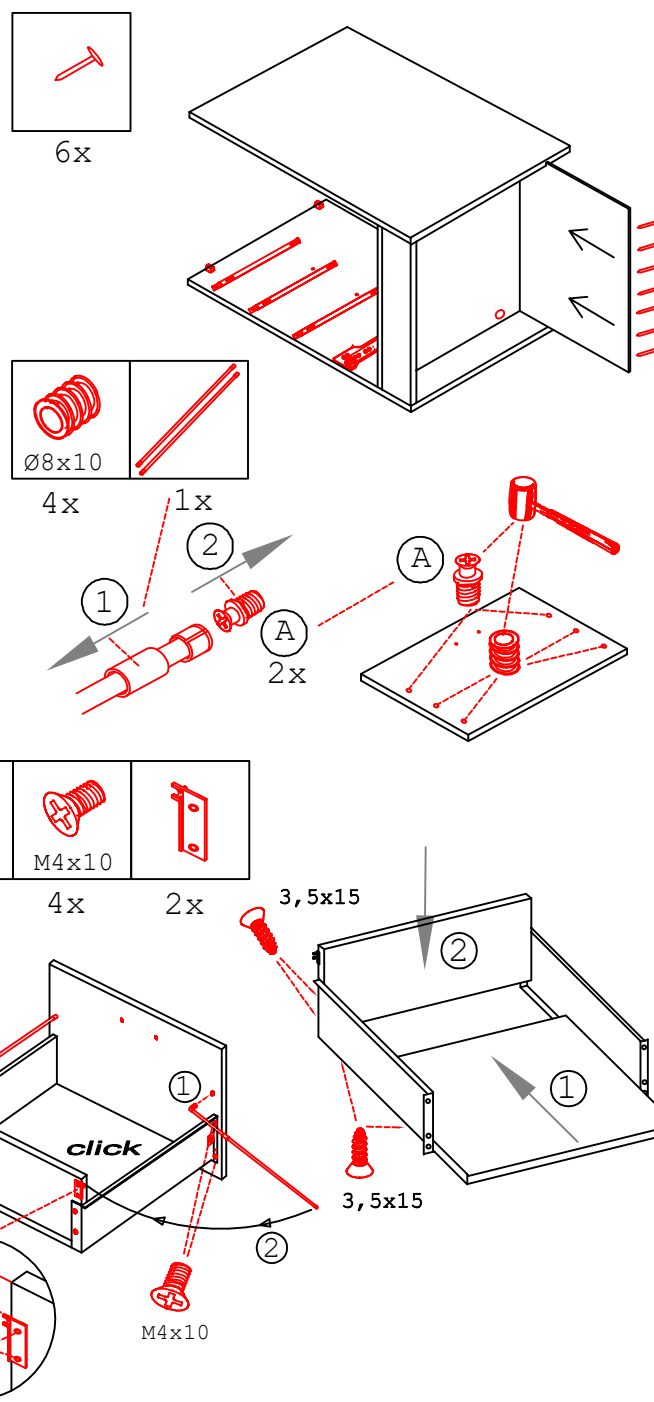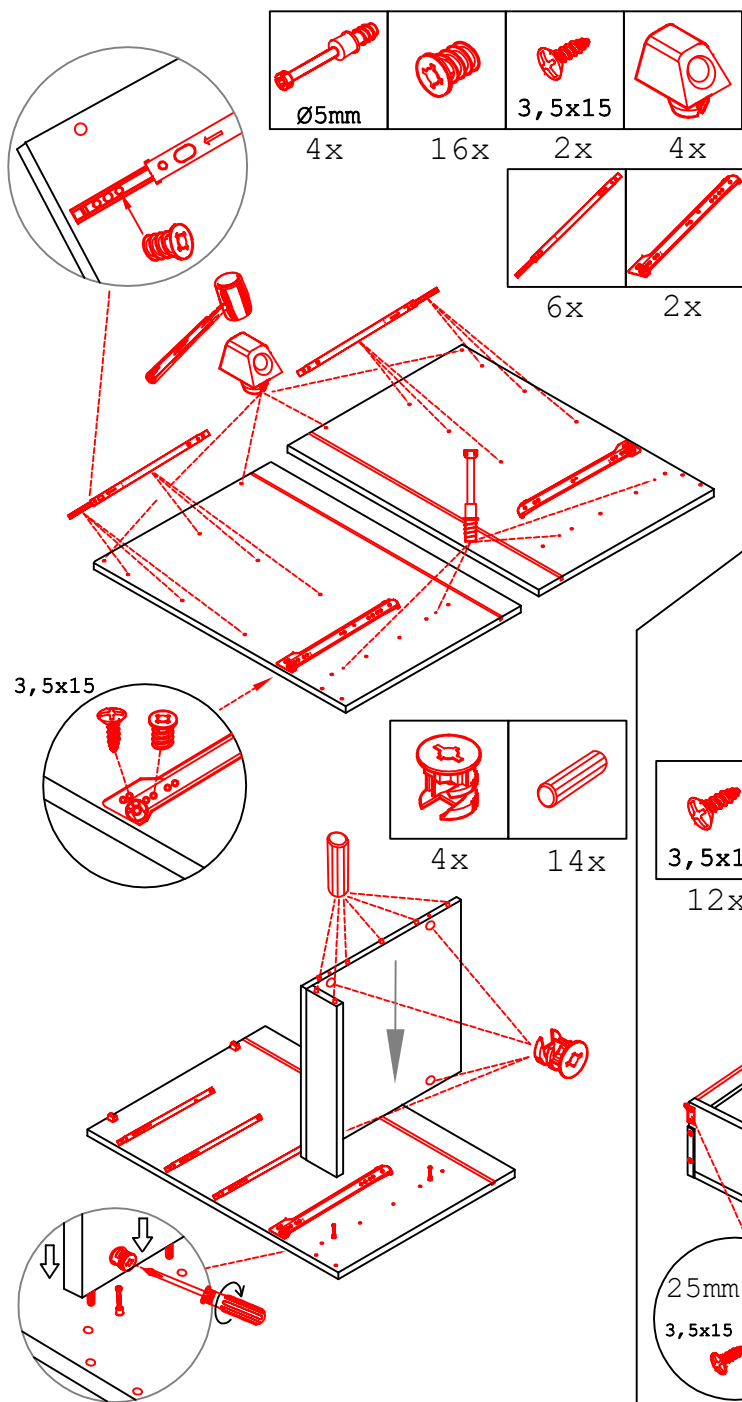

Die Einstellung der Auszug-Blende bitte durch drehen an den einzelnen Reihlingstangen vornehmen. (heranhohlen oder wegdrücken)